

**CARE AND USE GUIDE**  
 VACUUM INSULATED STAINLESS  
 STEEL MUG/TUMBLER

G E N U I N E  
**THERMOS**<sup>®</sup>  
 B R A N D

**GENERAL CARE**


- Before first use, wash all parts with warm soapy water. Rinse all parts thoroughly and allow time to dry.
- Contents should not be left in the container for longer than 24 hours. As soon as possible after each and every use, wash all parts with warm, soapy water. Rinse all parts thoroughly with clean water. Allow all parts to dry completely prior to next use or storage.
- DO NOT use abrasive cleaners or scrubbers since they may dull the finish.
- DO NOT use bleach or cleaners containing chlorine on any parts of the product.
- HANDWASH ONLY - this product is not dishwasher safe. DO NOT immerse or soak in water for prolonged periods of time. Residual liquids, food, or other contents may become trapped between product components, such as lid parts, container parts, gaskets (flexible band around lid and/or stopper), or straws (if present in the product). Hand washing is recommended to ensure that all parts of the product are thoroughly cleaned.
- For maximum thermal efficiency, preheat or prechill the product just prior to use. Fill with hot/cold tap water, attach lid, let stand for 5 to 10 minutes and empty water. After filling container with contents, re-cover with lid to increase thermal efficiency. Never

use a microwave, conventional oven, or other heat source for this purpose.

**ASSEMBLY & USE**

Sealing Lid with Tea Hook(if present):

1. Remove lid (E) by twisting anticlockwise.
2. Remove retainer (A) by turning it anticlockwise and lifting up.
3. Remove retainer gasket (B) from retainer (A).
4. Remove sealing disk (C).
5. Remove main gasket (D) from underside of lid (E).
6. Wash all parts separately, then re-assemble;
  - a. Main gasket (D) as shown in enlarged diagram above.
  - b. Sealing disc (C) with smooth side facing lid.
  - c. Retainer gasket (B) on retainer (A).

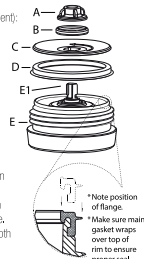

\* Image for reference only; actual product may vary



- d. Push retainer (A) onto lid post (E1) and turn clockwise to lock.
- Fill Container with contents. Do not overfill: Leave space for the lid (E), to avoid overflow.
  - Replace the lid (E) onto the mug or tumbler by twisting it clockwise.
  - To drink, slide the lever (if present) on the lid to the 'open' position.
  - This product comes equipped with an integrated tea hook that accommodates stringed tea bags and most loose leaf tea infusers with separate chain hook. For stringed tea bags, simply wrap the string of the tea bag around the integrated hook and allow the remaining string to hang outside the lid. For loose leaf tea infusers with a chain hook, slide the chain hook through the integrated tea hook and enjoy. For best results, prepare tea per the manufacturer's instructions and remove the tea bag or infuser after tea is brewed.

**WARNINGS**

- DO NOT use product in microwave, on stove-top, or in any type of oven.
- NOT RECOMMENDED FOR USE BY CHILDREN: Keep out of the reach of children, especially when product contains hot contents, which may burn or scald user.
- Always test temperature of contents before consuming.

- DO NOT overfill the container: Leave space at top of container for lid and stopper (if present), to avoid overflow. Hot contents may burn or scald user if overflow occurs.
- Check periodically to make sure any gasket (flexible band around lid and/or stopper) is present and properly positioned to prevent contents from passing through lid when lid is closed. Missing, worn or misaligned gasket may cause product to leak. Leakage of hot contents may burn or scald user.
- In general, contents should not be left in the container for longer than 24 hours. However, the rate at which contents spoil depends on several factors. Certain contents that include, for example, dairy and/or tomato may start to spoil sooner. Proceed with caution when using the product with quick spoiling contents.
- If contents are left in the container longer than 24 hours, or you suspect spoilage, use caution when opening the container. Contents spoilage can cause pressure inside the container to build possibly leading to the forceful ejection of the stopper or contents. In such circumstances, before attempting to open the container, ENSURE THE OPENING IS POINTED AWAY FROM THE USER OR OTHER PERSONS TO AVOID INJURY.
- DO NOT use tools or devices to force container to open. If you are unable to open container by hand, do not open it and dispose of it at your local waste facility.
- DO NOT use to store or carry carbonated drinks or dry ice. This

may cause lid/stopper and contents to eject forcefully or leak.

**LIMITED WARRANTY**

This warranty is given by UK Thermos Limited. This warranty only applies to Thermos brand products manufactured by or under our licence from us and which have been purchased from a retail outlet within the United Kingdom. For consumers, the benefits conferred by this warranty are in addition to all rights and remedies provided to consumers under consumer protection laws. This warranty does not exclude, limit, vary or otherwise affect any of your legal rights as a consumer. Our obligations under this warranty are limited to the terms set out below.

We warrant this Thermos brand product to be free from defects in material or workmanship under normal use in accordance with any user instructions accompanying this product for five years from the date of original purchase (the "warranty period"). If any such defect arises and a valid claim is received within the warranty period we will, at our option, repair or replace any product component part that fails to conform to this warranty within 30 days after its receipt by our factory service department. Nothing in this warranty excludes our liability for defective products under the Consumer Protection Act 1987. Subject to the foregoing and except where this Thermos brand product has been purchased by -

a consumer, all and any liability on our part for any loss of profits, revenues, use, savings, contracts, goodwill or any indirect, special, incidental, consequential loss or damage are excluded to the maximum extent permitted by applicable law. Some jurisdictions do not allow the exclusion of incidental, consequential or special damages, so the preceding exclusion may not apply to you. For information on returning a defective product under this warranty, please contact our customer care line.

UK Thermos LTD  
1-2 Lockwood Park - Leeds LS11 5UX - 0113 2763450  
www.thermos.co.uk

Please retain your original proof of purchase and this warranty sheet as you must produce them in order to make a claim under this warranty.

THERMOS is a registered trademark in over 115 countries.

