



WATER INFUSER BOTTLE



GENUINE
THERMOS[®]
BRAND

CREATE AND HYDRATE

The Thermos® Infusion bottle makes great tasting water infused with your favourite fresh flavours. You can choose fruits, soft vegetables, herbs and spices to create stunning fresh flavours that will keep you nourished and hydrated all day.

Whether you're using it for the office, the gym or sports, the easy twist lid keeps the contents sealed and fresh while giving you the control to vary the flow.

Directions for use



1

Prepare your ingredients



2

Unscrew lid & add your ingredients

3



Fill with fresh water

4

Replace lid and you're ready to go ▶



WHY NOT TRY



Cucumber

+



Strawberry

+



Mint



Pineapple

+



Melon

+



Raspberry



Cherry

+



Melon

+



Apple



Tomato

+



Basil

+



Cucumber



Lemon

+



Orange

+



Ice



Pear

+



Ginger

+



Lime



Lime

+



Blackberry

+



Raspberry



Ginger

+



Apple

+



Grapefruit

CARE AND USE

GENERAL CARE

- Before first use, wash all parts with warm soapy water. Rinse all parts thoroughly and allow time to dry.
- Contents should not be left in the container for longer than 24 hours. As soon as possible after each and every use, wash all parts with warm, soapy water. Rinse all parts thoroughly with clean water. Allow all parts to dry completely prior to next use or storage.
- **Do not** use abrasive cleaners or scrubbers since they may dull the finish.
- **Do not** use bleach or cleaners containing chlorine on any part of the product.
- **Do not** immerse or soak in water for prolonged periods of time. Residual liquids, food, or other contents may become trapped between product components, such as lid parts, container parts, gaskets (flexible band around lid and/or stopper). Hand washing is recommended to ensure that all parts of the product are thoroughly cleaned.

DIRECTIONS FOR USE

Infuser Bottle:

- 1 Remove lid by twisting anticlockwise.
- 2 Fill bottle with chosen fruits/herbs/vegetables/ice.
- 3 Add desired liquid. Do not over-fill: Leave space for lid to avoid overflow.
- 4 Replace the lid by twisting clockwise.
- 5 To drink, twist the top rotating ring to the desired capacity by rotating the ring in the direction of the arrow, anti-clockwise.
- 6 When finished drinking, close and lock the lid by securing the rotating-ring clockwise until firmly closed.

WARNINGS

- **Do not** use product in microwave, on stove top, or in any type of oven.
- **Not for use with hot liquids:** For cold liquids only. Hot liquids may cause burns or scald user.
- Always test temperature of contents before consuming.
- **Do not** overfill the container: Leave space at top of container for lid to avoid overflow.
- In general, contents should not be left in the container for longer than 24 hours. However, the rate at which contents spoil depend on several factors. Certain contents that include, for example, dairy and/or tomato may start to spoil sooner.
- **Do not** use tools or devices to force container to open. If you are unable to open container by hand, do not open it and dispose of it at your local waste facility.
- **Do not** use to store or carry carbonated drinks or dry ice. This may cause lid/stopper and contents to eject forcefully or leak.

LIMITED WARRANTY

This warranty is given by UK Thermos Limited. This warranty only applies to Thermos brand products manufactured by or under our licence from us and which have been purchased from a retail outlet within the United Kingdom. For consumers, the benefits conferred by this warranty are in addition to all rights and remedies provided to consumers under consumer protection laws. This warranty does not exclude, limit, vary or otherwise affect any of your legal rights as a consumer.

Our obligations under this warranty are limited to the terms set out below. We warrant this Thermos brand product to be free from defects in material or workmanship under normal use in accordance with any user instructions accompanying this product for five years from the date of original purchase (the "warranty period"). If any such defect arises and a valid claim is received within the warranty period we will, at our option, repair or replace any product component part that fails to conform to this warranty within 30 days after its receipt by our factory service department.

Nothing in this warranty excludes our liability for defective products under the Consumer Protection Act 1987. Subject to the foregoing and except where this Thermos brand product has been purchased by a consumer, all and any liability on our part for any loss of profits, revenues, use, savings, contracts, goodwill or any indirect, special, incidental, consequential loss or damage are excluded to the maximum extent permitted by applicable law. Some jurisdictions do not allow the exclusion of incidental, consequential or special damages, so the preceding exclusion may not apply to you.

For information on returning a defective product under this warranty, please contact our customer care line.

UK Thermos LTD
1-2 Lockwood Park
Leeds LS11 5UX
0113 2763450

www.thermos.co.uk

Please retain your original proof of purchase and this warranty sheet as you must produce them in order to make a claim under this warranty.

THERMOS is a registered trademark
in over 115 countries.



360° lid allows you to drink from anywhere on the lid



Twisting lid allows you to adjust the flow of liquid



Integrated strainer holds back ice and fruit



Ingredients retained in water for lasting freshness



Flip-up carry loop



Made from Eastman Tritan™ copolyester



BPA-free



Dishwasher safe



Impact resistant

TP405UKTL

Made in the UK

UK Thermos Ltd. 1-2 Lockwood Park
Leeds, LS11 5UX

www.thermos.co.uk

THERMOS is a registered trademark
in over 115 countries

Water infuser bottle
710ml

G E N U I N E

THERMOS®

B R A N D