



CARE AND USE GUIDE
HYDRATION BOTTLE

GENUINE
THERMOS[®]
BRAND

GENERAL CARE

- Before first use, wash all parts with warm soapy water. Rinse all parts thoroughly and allow time to dry.
- Contents should not be left in the container for longer than 24 hours. As soon as possible after each and every use, wash all parts with warm, soapy water. Rinse all parts thoroughly with clean water. Allow all parts to dry completely prior to next use or storage.
- DO NOT use abrasive cleaners or scrubbers since they may dull the finish.
- DO NOT use bleach or cleaners containing chlorine on any parts of the product.
- This product is top-rack dishwasher safe; however, hand washing is recommended as the dishwasher uses harsher detergents and hot water that may affect the appearance of your product.
- Residual liquids, food, or other contents may become trapped between product components, such as lid parts, container parts, gaskets (flexible band around lid and/or stopper), or straws (if present in the product). Although this product is top-rack dishwasher safe, hand washing is recommended to ensure that all parts of the product are thoroughly cleaned.

 
ASSEMBLY & USE

Hard Spout Lid (if present):

1. Remove lid (A) by twisting anticlockwise.

2. Pull down the locking-ring (B) (if present) located on lid (A). Press the push-button (D) on the lid (A) to open lid cover (C).
3. Pull out spout gasket (C1) from underside of lid cover (C) to completely remove it.
4. Remove o-ring gasket (A1) from underside of lid (A).
5. Wash all parts separately and re-assemble.
 - a. Ensure gaskets (A1 and C1) are properly seated to minimise leaking.
6. Fill container with contents. Do not overfill. Leave space for lid (A) to avoid overflow.
7. Replace the lid (A) by twisting it clockwise.
8. To drink, pull down the locking-ring (B) (if present) located on lid (A). Push the button (D) located on the lid (A), which will release the lid cover (C) and reveal the drink opening.
9. When finished drinking, close and lock the lid cover (C) by securing the locking-ring (B) (if present) over the push-button (D).

* Image for reference only; actual product may vary



See WARNINGS section below for further details.

Soft Spout Lid (if present):

1. Remove lid (E) by twisting anticlockwise.
2. Pull down the locking-ring (F) located on lid (E). Press the push-button (G) on the lid (E) to open lid cover (H).
3. Pull out soft spout gasket (E1) by pulling from the top of (E1) through the top of lid (E) to completely remove it.
4. Wash all parts separately and re-assemble.
 - a. Fold flat portion of soft spout gasket (E1) in half and feed through the top of the lid (E).
 - b. Ensure gasket (E1) is properly seated to minimise leaking.
5. Fill container with contents. Do not overfill. Leave space for lid (E) to avoid overflow.
6. Replace the lid (E) by twisting it clockwise.
7. To drink, pull down the locking-ring (F) located on the lid (E).

* Image for reference only; actual product may vary





 
Push the button (G) located on the lid (E), which will release the lid cover (H) and reveal the drink opening.

- When finished drinking, close and lock the lid cover (H) by securing the locking-ring (F) over the push-button (G).

Flip-Up Straw Lid (if Present):

- Remove lid (I) by twisting anticlockwise.
- Pull on the straw tab (J1) on the sipper straw (J) to open.
- Pull the straw stem (K) out of the bottom of the lid (I).
- Wash all parts separately and reassemble.
- Fill container with contents. Do not overfill: Leave space for the lid (I) and straw stem (K), to avoid overflow.
- Replace lid (I) by twisting clockwise.
- To drink, pull on the straw tab (J1) on the sipper straw (J) to open.
- When finished drinking, press the sipper straw (J) down to closed position.

* Image for reference only: actual product may vary




See WARNINGS section below for further details.

Flip-top Lid (if present):

- Remove lid (L) by twisting anticlockwise.
- Flip up the lid cover (M) until locked in the open position as shown in diagram.
- Pull out spout gasket (M1) from underside of lid cover (M) to completely remove it.
- Wash all parts separately and reassemble.
 - Ensure the spout gasket (M1) is completely positioned on the underside of lid cover (M).
- Fill container with contents. Do not overfill: leave space for lid (L) to avoid overflow.
- Replace the lid (L) by twisting it clockwise.
- To drink, flip up the lid cover (M) until locked in the open position as shown in diagram.
- When finished drinking, flip the lid cover (M) in the opposite direction to cover the drink opening. Ensure that the lid cover (M)

* Image for reference only: actual product may vary

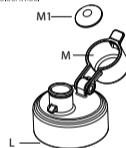

is pressed until tightly closed.

WARNINGS

- DO NOT use product in microwave, on stove top, or in any type of oven.
- NOT FOR USE WITH HOT LIQUIDS: For cold liquids only. Hot liquids may cause burns or scald user.
- Always test temperature of contents before consuming.
- DO NOT overfill the container: Leave space at top of container for lid to avoid overflow.
- Check periodically to make sure any gasket (flexible band around lid and/or stopper) is present and properly positioned to prevent contents from passing through lid when lid is closed. Missing, worn or misaligned gasket may cause product to leak.
- In general, contents should not be left in the container for longer than 24 hours. However, the rate at which contents spoil depends on several factors. Certain contents that include, for example, dairy and/or tomato may start to spoil sooner. Proceed with caution when using the product with quick spoiling contents.
- If contents are left in the container longer than 24 hours, or you suspect spoilage, use caution when opening the container. Contents spoilage can cause pressure inside the container to build possibly leading to the forceful ejection of the stopper or contents. In such circumstances, before attempting to open the

container, ENSURE THE OPENING IS POINTED AWAY FROM THE USER OR OTHER PERSONS TO AVOID INJURY.

- DO NOT use tools or devices to force container to open.
- If you are unable to open container by hand, do not open it and dispose of it at your local waste facility.
- DO NOT use to store or carry carbonated drinks or dry ice. This may cause lid/stopper and contents to eject forcefully or leak.

LIMITED WARRANTY

This warranty is given by UK Thermos Limited.

This warranty only applies to Thermos brand products manufactured by or under our licence from us and which have been purchased from a retail outlet within the United Kingdom. For consumers, the benefits conferred by this warranty are in addition to all rights and remedies provided to consumers under consumer protection laws. This warranty does not exclude, limit, vary or otherwise affect any of your legal rights as a consumer. Our obligations under this warranty are limited to the terms set out below.

We warrant this Thermos brand product to be free from defects in material or workmanship under normal use in accordance with any user instructions accompanying this product for one year from the date of original purchase (the "warranty period"). If a such defect arises and a valid claim is received within the warranty

period we will, at our option, repair or replace any product component part that fails to conform to this warranty within 30 days after its receipt by our factory service department. Nothing in this warranty excludes our liability for defective products under the Consumer Protection Act 1987. Subject to the foregoing and except where this Thermos brand product has been purchased by a consumer, all and any liability on our part for any loss of profits, revenues, use, savings, contracts, goodwill or any indirect, special, incidental, consequential loss or damage are excluded to the maximum extent permitted by applicable law. Some jurisdictions do not allow the exclusion of incidental, consequential or special damages, so the preceding exclusion may not apply to you. For information on returning a defective product under this warranty, please contact our customer careline.

UK Thermos LTD
1-2 Lockwood Park - Leeds LS11 5UX - 0113 2763450
www.thermos.co.uk

Please retain your original proof of purchase and this warranty sheet as you must produce them in order to make a claim under this warranty.

THERMOS is a registered trademark in over 115 countries.

